


# MODEL: PARIS

## ENTERTAINMENT UNIT

### ASSEMBLY INSTRUCTION

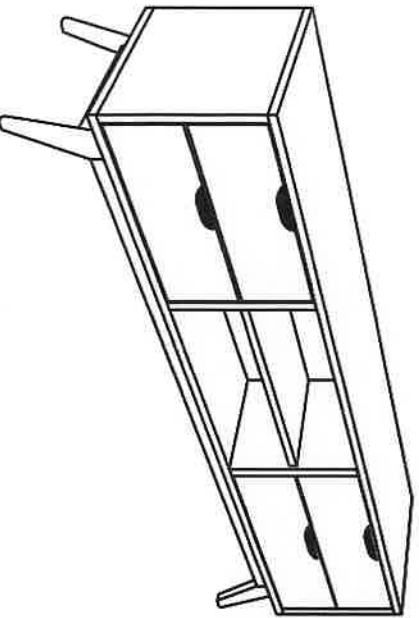

PART LIST		
No	Description	Qty
1	Body	1
2	Leg	4

HARDWARE LIST		
No	Description	Qty
A	Flat Washer	4
B	Spring Washer	4
C	JCBC Screw	4
D	Allen Key	1

#### ASSEMBLY TIPS

Remove hardware from box and sort by size to check that all hardware and parts are present before assembling. Follow instructions below in the proper sequence to ensure fast, easy and correct assembly.

#### ⚠ WARNING !!!

DO NOT FULLY TIGHTEN ALL BOLTS UNTIL ALL PARTS ARE IN PLACE. FAILURE TO FOLLOW THIS INSTRUCTION MAY CAUSE THE BOLTS TO BE MISALIGNED DURING THE ASSEMBLY.

### STEP 1

